

Instructions Manual

Ease

WKS033.2.A33

Electric Spa Chair

VERSION 1.25

1.Welcome!

Congratulations on purchasing this new spa chair. This manual is only for reference of using and operating this electric spa bed. Our company does not assume all the consequences and responsibilities caused by using this manual for other purposes.

- 1、All users of this product must read this section of the manual before plugging in and using this chair. Contact your medical practitioner, before using this chair, if you have any special related health or safety concerns.
- 2、Plug in the chair to a properly grounded electrical outlet and turn on the master power switch at the control panel of the chair, where the power cord goes into the chair's back section.
- 3、Now, sit in the chair and hit the Power button on the remote control wand. For the fastest way to begin enjoying your new chair, simply choose Auto. After choose this option, the only other adjustments you may wish to make is the Back Recline angle, the Seat Forward/ Seat Backward.
- 4、The following pages offer a complete description of each of the chair's remote control wand buttons and subsequent features for your knowledge and enjoyment when using the chair in a manual mode, instead of the Auto modes.



WK

Imported by
WEELKO BARCELONA SL
Pol. Ind. La Valldan
Camí de Garreta, 92
08600 Berga
Barcelona - Spain
T. +34 93 824 90 20
E. info@weelko.com

2. Structure of electric spa bed



3.Warning and safety

PLEASE READ THE FOLLOWING WARNING CAREFULLY BEFORE YOU USE

- 1、PLEASE MAKE SURE THE POWER PLUG IS STABLE .IF NOT WILL BE ELECTRIC SHOCK OR FIRE.
- 2、DO NOT PLUG OFF WHEN THE CHAIR WORKING
- 3、DO NOT PLUG IN WITH WET HAND,IN CASE WILL BE ELECTRIC SHOCK OR INJURY
- 4、DO NOT PUSH POWER LINE TO PLUG OFF
- 5、PLEASE POWER OFF AND UNPLUG WHEN YOU CLEARING,IN CASE WILL BE ELECTRIC SHOCK INJURY
- 6、PLEASE POWER OFF IMMEDIATELY,IF YOU FIND SOMETHING ABNORMAL(LIKE SMELL BURN)
- 7、PLEASE TAKE OFF THE BACKREST COVER TO MAINTAIN


4.Operation instruction



1. Power ON/OFF
2. Neck strength: press this button you can choose "Neck knead" comfortable intensity.
3. MODE: Press this button have three mode to choose; kneading, shiatsu, and vibration.
4. Back strength : press this button, you can choose "Backrest knead" comfortable intensity;
5. Backrest down: press this button, you can adjust the angle of your back, which will lie back.
6. Working time adjustment mode key.
7. Move the chair backward mode key.
8. Move the chair forward mode key.
9. Backrest raise: press this button, you can adjust the angle of your back, which will recline forward.
10. Back strength : press this button, you can choose "Backrest knead" comfortable intensity;
11. Neck strength: press this button you can choose "Neck knead" comfortable intensity.

5. Technical Specifications

Descriptions	Features
Models	WKS033. 2. A33. 1/2 & WKS033. 2. A33. 2/2
Related voltage	100~240VAC
Rated frequency	50/60Hz
Rated power	120W (chair) / 750W (basin)
Timer	5/10/15/20/25/30 minutes
Max timer	30 minutes
Chair packing dimension	Chair carton: 1020*550*570 (mm) Base carton: 1390*860*630 (mm)
Wire length	Power cord 1.6M/ Remote cord 1.8M
Service condition	Temperature: 25 °
	Humidity: 30-85RH
Storage condition	Temperature: : 20 ° ~ 60 °
	Humidity: 30-85RH
Security features	Equipped with overheating, over current safety protection
Using Effect	Increase blood circulation, relieve muscle fatigue
Current	1.2A
Anti-Electric Grade	
Insulation rating	E

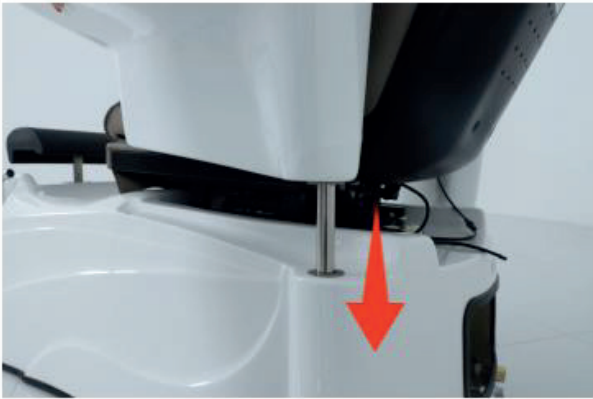



6.Troubleshooting

Situation	Solve
The chair can not work normally even with power	Please check the lights of the electric board on the side of the chair is on or not, otherwise please replace the fuse in the state of the power-off
The screen of the remote controller can not work even the chair can work normally	Please check the remote controller is connected correctly or not, or replace another same kind controller.
The chair can not move forward and backward normally	lease check the red and back part of the linear actuator under the chair base is connected or not

7.Maintenance


Please turn off or unplug the power cord when the chair is maintaining or cleaning.

1.For leather cleaning, please use the neutral detergent for dust cleaning.

2.For the armrest cleaning, please use the neutral detergent for dust cleaning.

3.For the maintenance of the mechanical, can appropriate add the grease quarterly.

8.Installation

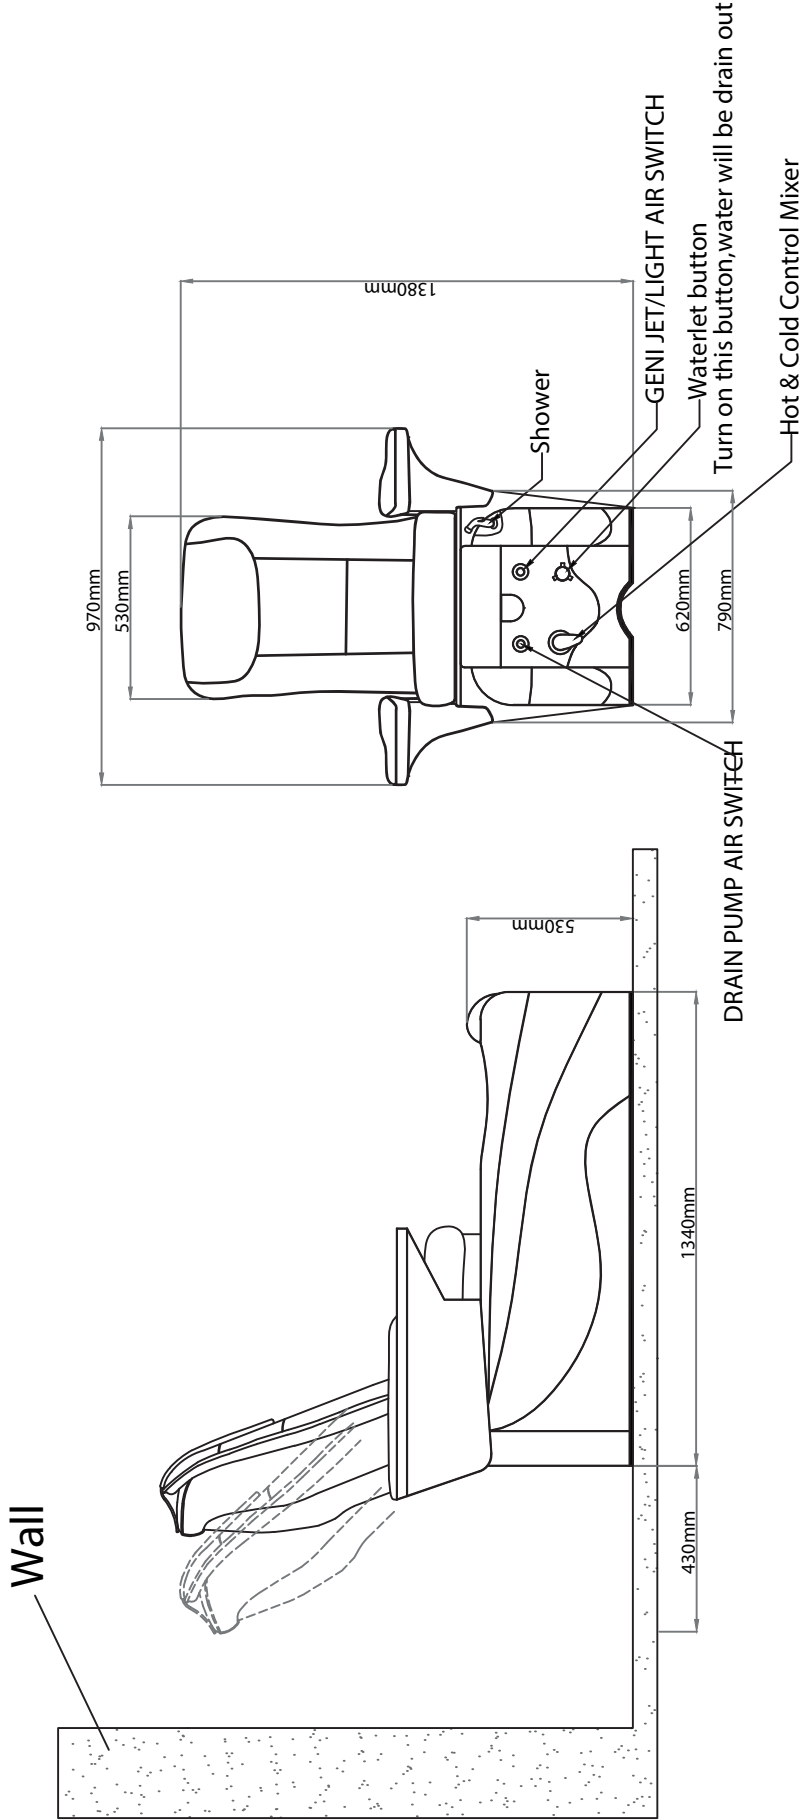

Rear View

