


Instructions Manual

Beauty instrument

F317A.N

BIO & MAGIC GLOVE

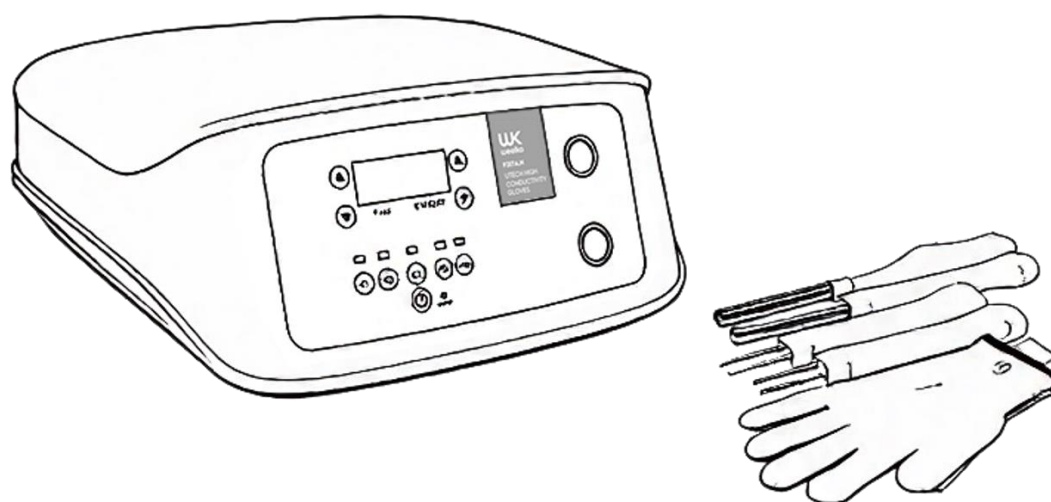

VERSION 1.0

Thank you for choosing our product. This manual is designed to help you operate the device properly. We hope our product and service bring you a premium experience.

This user manual contains general information about the device. It serves as a starting point for new users, providing an overview of the system, its working principle, installation, and operation methods.

Safety Precautions

1. Please read this manual carefully before use. Operators must be familiar with the manual and operation procedures. The device must be managed by designated personnel.
2. Do not use daisy-chained power sockets to avoid fire hazards.
3. Turn off the power switch before replacing the fuse to prevent fire or electric shock.
4. Use a power supply of $220V \pm 22V$, $50Hz \pm 1Hz$ and a properly grounded socket.
5. Do not use damaged or modified power cords, as they may cause fire or electric shock.
6. Contact the company immediately if the device is loose, dropped, or damaged.
7. Do not use the device in unstable environments such as tilting, vibrating, or impacting conditions.
8. Keep water or foreign objects out of the device. If any foreign matter enters, contact us promptly.
9. Unplug the power cord before moving the device.
10. Avoid vibration when moving the device.
11. Place the device on a stable surface and leave at least 5cm of space around it for ventilation and heat dissipation.
12. Do not cover the device to prevent blocking ventilation openings.
13. Avoid using the device in the following environments: direct sunlight, high humidity, near water, vibration/tilt, strong magnetic fields, electromagnetic/surge voltage areas, chemical storage, or corrosive gas environments.
14. Do not place or use the device near radios, TVs, copiers, fax machines, etc.
15. Do not use the device with other equipment (such as microwave devices) to avoid interference and malfunction.
16. If the device or the patient shows abnormal conditions during operation, immediately move the handle away from the patient, press the stop switch, and stop using the device.
17. The device must be operated correctly by skilled technicians. Unauthorized personnel are prohibited from using it.
18. After operation, place the control handle back on the hanger.
19. Clean the probe of the control handle after use for next time.

Precautions for Fault, Storage, and Inspection

1. Do not use the device if it malfunctions. If smoke, burning smell, or failure occurs, continue use may cause fire or electric shock. Press the stop button immediately, turn off the power, unplug the cord, and contact the company or distributor.
2. Do not repair or modify the device without professional technicians. Do not open the device interior.
3. Inspect the device and components regularly.
4. Do not use cleaning tools that may damage the protective coating (e.g., brushes, brooms).
5. If the device is unused for more than 2 weeks, inspect it carefully before reuse.

Contraindicated Groups (Do Not Use If You Belong to the Following Groups)

- People with pacemakers, defibrillators, or metal implants (plates, screws, etc.)
- Pregnant, breastfeeding, or menstruating women
- People with epilepsy, high blood pressure, severe heart disease, diabetes, tumors, cancer, or thyroid disease
- People with open wounds, damaged skin, severe inflammation, eczema, dermatitis, facial redness (telangiectasia), or rosacea
- People who have received botox, fillers, laser, chemical peeling, or plastic surgery in the past 6 months

Suitable Users

1. Healthy adults for daily skin care
2. Sensitive skin, inflamed acne, or minor skin injuries (use with caution)
3. Pregnant/breastfeeding women or those with facial/systemic diseases (consult a physician first)

Pre-Use Preparation

1. Clean the device host and accessories before use to ensure no stains or cosmetic residue.
2. Clean your face and apply a moderate amount of toner, serum, or other easily absorbed skin care products. Avoid thick creams.

Shutdown and Cleaning

After use, wipe the treatment head with a clean soft cloth or cotton pad to remove residue. Store in a dry and ventilated place.

Additional Notes

1. This product is a skin care auxiliary tool, not for medical use. It cannot replace medicine or professional medical aesthetic treatment.
2. Keep the treatment head in contact with skin during use. Avoid operating without contact to prevent performance issues or shortened lifespan.
3. Do not use for too long each time. Recommended: once daily or every other day. Overuse may burden the skin.
4. If you feel fever, stinging, or discomfort during use, stop immediately. Clean your face and observe. Consult a professional if discomfort persists.

Operation Instructions



1. Connect the device to AC 220V power. A beep indicates power-on and standby. The digital tube shows 30 minutes (default time) and energy level 0 (default).
2. Press the TIME button to adjust working time: 1–99 minutes (adjustable by 1 minute per step).
3. Press the +/- buttons to adjust energy intensity: 1–15 levels (15 is maximum).
4. Choose manual or auto mode as needed.
5. Select one of P1–P4 programs. When AUTO indicator is on, BIO cycles P1–P4 automatically every 1 minute. Manual mode adjusts speed automatically for optimal effect.
6. When display time reaches 0, a beep sounds and all outputs turn off.

Packaging List

Name	Image Quantity
Main Unit	1 pc
Straight Stick	2 pc
Cotton Swab Handle	2 pc
Conductive Gloves (L)	2 pc
Disposable Gloves	6 pc
Spring Cables	4 pc
Power Cord	1 pc

Product Specifications

- Input Voltage: AC 220V–240V
- Frequency: 50/60Hz
- Power: 4W
- Package Size: 34x34x22CM
- Gross Weight: 3.15kg
- Net Weight: 2.65kg



Imported by
WEELKO BARCELONA SL

Pol. Ind. La Vall dan
Camí de Garreta, 92
08600 Berga
Barcelona - Spain T.
+34 93 824 90 20
E. info@weelko.com